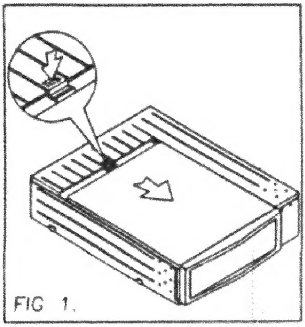

FIG 1.

1. PUSH SNAP AND PULL OUT THE DISK BRACKET.

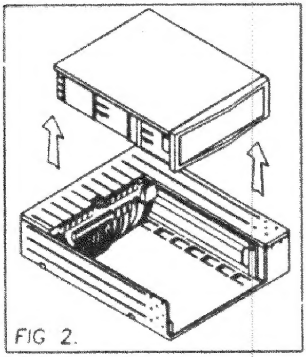

FIG 2.

2. TAKE OUT THE BRACKET FROM THE CASE BODY ACCORDING TO THE DIRECTION.

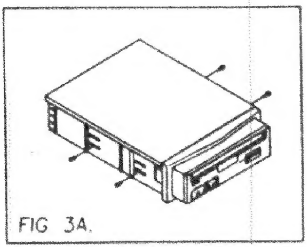

FIG 3A.

3. A: FOR OPEN STYLE
INSTALL CD-ROM OR OTHER DRIVE AND FASTEN THE SCREWS.

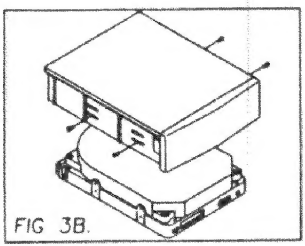

FIG 3B.

B: FOR SEALED STYLE
INSTALL H.D.D. AND FASTEN THE SCREWS.

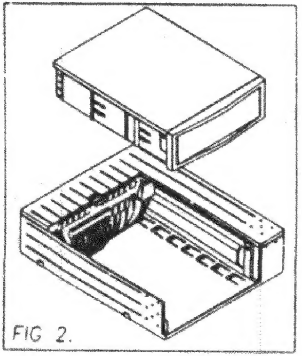

FIG 2.

4. INSTALL THE CONNECTORS, THE REPRESENTATION OF EACH CONNECTOR AS FOLLOWING:

COLOR	BLACK	YELLOW	BLUE	RED
ID SW	COM	4	2	1

(SCSI BOX ONLY)

COLOR	RED	BLACK
RED-LED	+	-

COLOR	RED	BLACK	WHITE
RCA JACK	RIGHT	COM	LEFT

(5.25" BOX ONLY)

COLOR	RED	BLACK	BLACK	YELLOW
DC POWER	+5V	COM	COM	+12V

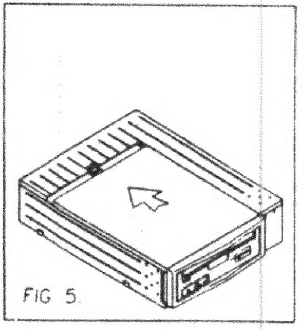

FIG 5.

5. PUT THE BRACKET BACK TO THE CASE BODY .

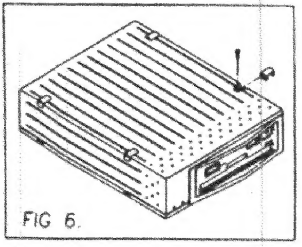

FIG 6.

6. A: PULL OUT THE PAD INDICATED AND USE SCREW AND SCREW DRIVER TO FASTEN THE UPPER CASE, DISK BRACKET AND PAD.

B: IF OPEN UPPER CASE IS NECESSARY, PUT OUT THE 4 PADS IN THE UPPER CASE. THEN THE UPPER CASE COULD BE REMOVED.

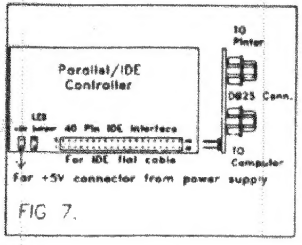

FIG 7.

7. 3.5" PARALLEL/IDE PIN ASSIGNMENT AND CABLE CONNECTION.
(IDE BOX ONLY)